


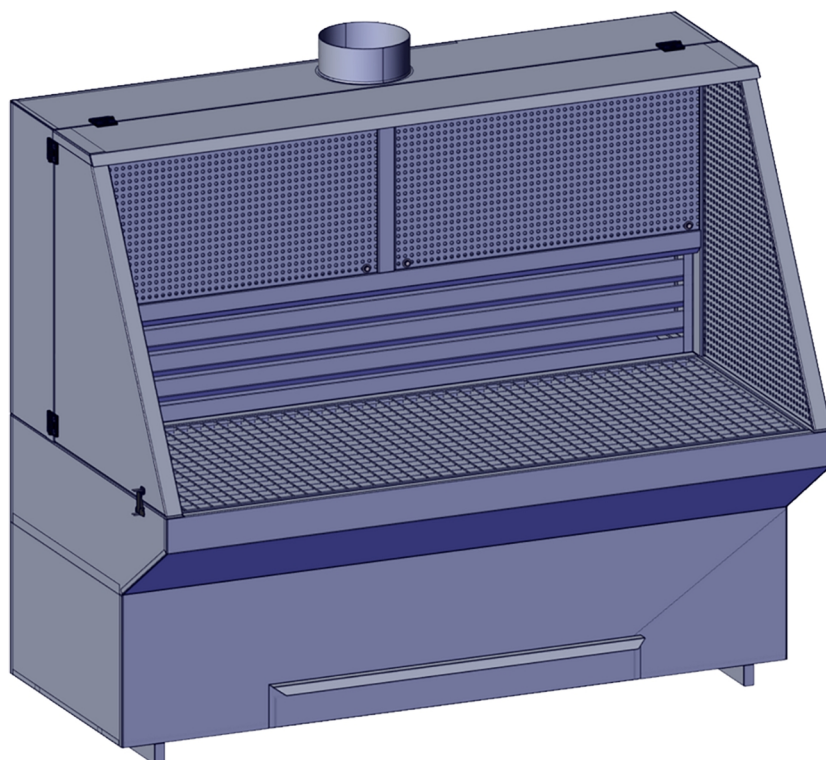

HERR® Grinding table

Operating instructions EX-0-922-009/N-24373 • BAL.1272.0

Edition 1, 2025-10-13

THERMACUT®
THE CUTTING COMPANY®

Table of contents

1 Identification.....	4
1.1 Signs and symbols used	4
1.2 Classification of the warnings	5
1.3 Product label	5
2 Safety.....	6
2.1 Intended Use	6
2.2 Responsibilities of the operator	6
2.3 Warnings and information signs.....	7
2.4 Safety instructions.....	8
2.4.1 Basic safety instructions	8
2.4.2 Safety instructions for grinding.....	8
2.4.3 Safety instructions for personal protective equipment	8
2.4.4 Safety instructions for grinding fumes and dust	9
2.4.5 Safety instructions for emergencies	9
3 Scope of delivery	10
4 Product description	11
4.1 Structure and function	11
5 Technical data	12
5.1 Ambient conditions.....	12
5.2 Product data	12
6 Transport and setup	13
6.1 Transporting and Setting Up the Product	14
6.2 Modular extension of the working area.....	14
7 Putting into operation	16
7.1 Mounting the piping to the air extraction fitting.....	16
7.2 Carrying out functional test	16
8 Operation	17
8.1 Opening the winged doors.....	18
9 Putting out of operation	19
10 Maintenance and cleaning	19
10.1 Maintenance and cleaning intervals.....	20
10.2 Cleaning the grid, slats and interior.....	21
10.3 Emptying and cleaning the dust bin.....	22
11 Faults and their correction	23
12 Disassembly.....	24

13 Disposal..... 26

13.1 Disposal of grinding dust..... 26

13.2 Disposal of materials..... 26

13.3 Disposal of consumables..... 26

13.4 Disposing of packaging..... 26

14 Addresses and contacts 27

15 Warranty..... 30

1 Identification

These operating instructions describe the HERR® Grinding table. When used in these operating instructions, the term "product" always refers to the HERR® Grinding table .

The HERR® Grinding table is a stationary solution for extracting and collecting the fumes and dust produced during grinding processes.

1.1 Signs and symbols used

In these operating instructions, the following signs and symbols are used:

►	General instructions.
1.	Steps to be carried out in succession.
-	Lists.
⇒	The cross-reference refers to detailed, supplementary or further information.
1	Caption, item description.

1.2 Classification of the warnings

The warning notices used are divided into four different levels and are printed in front of potentially dangerous work steps.

Depending on the type of danger, the following signal words are used:

 DANGER	
	Describes an imminent danger. Will result in death or serious injuries if not avoided.
 WARNING	
	Describes a potentially dangerous situation. May result in death or serious injuries if not avoided.
 CAUTION	
	Describes a potentially damaging situation. May result in slight or minor injuries if not avoided.
NOTE	
	Describes possible property damage. If the notice is not followed, irreparable damage to the product or equipment can be the result. Work results may be impaired.

1.3 Product label

This product fulfills the requirements that apply to the market to which it has been introduced. A corresponding marking has been affixed to the product, if required.

2 Safety

This chapter describes the essential safety requirements and warns of residual hazards that should be kept in mind, to keep the product safely. Non-observance of the safety instructions may result in risks to the life and health of personnel as well as cause environmental or material damage.

2.1 Intended Use

The product is used for extracting and collecting fumes and dust during grinding and polishing. The product can be used with filter systems or central extraction systems to extract and filter the fumes and dust produced during the machining of steel with an alloy content of nickel and chrome under 30%. The product must not be used for grinding or polishing aluminum.

- ▶ Only operate the product with original THERMACUT spare parts.
- ▶ Do not exceed the maximum load data given in the documents. Excess loads will lead to irreparable damage.
- ▶ Do not make any structural modifications to the product.
- ▶ Use the product only in a closed environment.
- ▶ Do not use or store the product in wet conditions.
- ▶ Only store the product outdoors when sufficiently protected against the influences of the weather.

The product may only be used for the purpose and in the way described in this document. Any other use is considered non-intended. Unauthorized conversion work or modifications to increase performance are not permissible.

2.2 Responsibilities of the operator

- ▶ Keep non-suitably qualified people away from the workplace.
- ▶ Ensure that only suitably qualified personnel perform work on the product or system.

Suitably qualified personnel are:

- those who are familiar with the basic regulations on occupational safety and accident prevention;
- those who have been instructed on how to handle the product;
- those who have read and understood all related documentation;
- those who have been trained accordingly;
- those who are able to assess the work assigned to them and recognize possible risks thanks to their special training, experience and knowledge.

2.3 Warnings and information signs

The following warning, notice and mandatory signs can be found on the product.

These markings must always be legible. They may not be covered, obscured, painted over, or removed.

	► Wear a respiratory mask.
	► Wear safety goggles.
	► Wear a protective suit.
	► Wear protective gloves.
	► Read and follow the operating manual. Ensure that the operating instructions can be consulted at all times.
	► Do not throw any cigarettes or burning objects into the product.

2.4 Safety instructions

2.4.1 Basic safety instructions

The product has been developed and manufactured in accordance with the latest technology and recognized safety standards and directives. Due to the product design, unavoidable technical residual risks exist to the user, third parties, devices, and other material property. The manufacturer will accept no liability for damage caused by non-observance of the documentation.

- ▶ Please read the documentation carefully before using the product for the first time and comply with the instructions contained.
- ▶ Only operate the product in technically perfect condition and ensure compliance with all documentation.
- ▶ Read the documentation carefully before carrying out specific work, for example commissioning, operation, transport, and maintenance.
- ▶ Use suitable means to protect yourself and bystanders from the hazards listed in the documentation.
- ▶ Store the documentation within easy reach of the product for reference and enclose all documents when passing on the product.
- ▶ Consult the documentation for the other components used.
- ▶ Observe the local accident prevention regulations.
- ▶ Only trained specialists should commission, operate, and service the device. Trained specialists are persons who, based on their special training, knowledge, experience and due to their knowledge of the relevant standards, are able to assess the tasks assigned to them and identify possible dangers.
- ▶ Ensure the workplace is well lit and keep it neat and tidy.
- ▶ For disposal, observe the local regulations, laws, provisions, standards, and directives.

2.4.2 Safety instructions for grinding

- ▶ Grinding can damage eyes, skin and hearing. Note that further hazards can occur in connection with other grinding components. For this reason, always wear the mandatory protective clothing in accordance with local laws and directives.
- ▶ All metal vapors, especially lead, cadmium, copper and beryllium, are harmful. Ensure sufficient ventilation or extraction. Do not exceed the established occupational exposure limit (OEL).
- ▶ Adhere to the general fire protection regulations and remove flammable materials from the vicinity of the workplace prior to starting work. Provide suitable fire extinguishing equipment at the workplace.

2.4.3 Safety instructions for personal protective equipment

- ▶ Do not wear any loose clothing or jewelry.
- ▶ Wear a hairnet over long hair.
- ▶ Note local laws and directives concerning protective equipment.
- ▶ Make sure that any third parties in the direct vicinity are wearing personal protective equipment.
- ▶ Wear your personal protective equipment according to the hazard.

2.4.4 Safety instructions for grinding fumes and dust

The product contains harmful dust that can collect on surfaces and penetrate the ambient air as of the first use. They can damage the respiratory system when inhaled.

- ▶ Check and wear your personal protective equipment.
- ▶ Only use the product in rooms which are sufficiently ventilated.
- ▶ Make sure that all the seals on the product are free of dirt.
- ▶ Remove dust deposits in the surrounding area immediately using an industrial vacuum cleaner of dust class H or a damp cloth.
- ▶ The filters provided must always be used when operating the product.

The extraction of substances and materials which are combustible, aggressive, chemical or contain oil vapors as well as aluminum or magnesium dusts can lead to fire and explosion due to chemical reactions. Serious injuries and irreparable damage to the product can be the result.

- ▶ Only ever use the product as intended.
- ▶ Use a suitable filter system.

2.4.5 Safety instructions for emergencies

- ▶ In an emergency, immediately disconnect all supplies (for example electrical power supply, coolant supply, compressed air supply, shielding gas supply).
- ▶ Extinguish burning oil or emulsions using a CO₂ or powder fire extinguisher.

3 Scope of delivery

The following components are included in the scope of delivery:

- 1x HERR® Grinding table
- 1x operating instructions
 - ▶ Order the equipment parts and wear parts separately.
 - ▶ The order data for the equipment parts and wear parts can be found in the current order documents.
 - ▶ For more information about points of contact, consultation, and orders, visit www.thermacut.com.

Although the items delivered are carefully checked and packaged before dispatch, it is not possible to fully exclude the risk of transport damage.

Goods-in inspection

- ▶ Use the delivery note to check that everything has been delivered.
- ▶ Check the delivery for damage (visual inspection).

Complaints

- ▶ If goods are damaged, contact the final carrier.
- ▶ Keep the packaging for a possible check by the carrier.

Returns

- ▶ Use the original packaging and packing material for returns.
- ▶ If you have questions concerning packaging and safety during shipment, contact your supplier, carrier, or transport company.

4 Product description

4.1 Structure and function

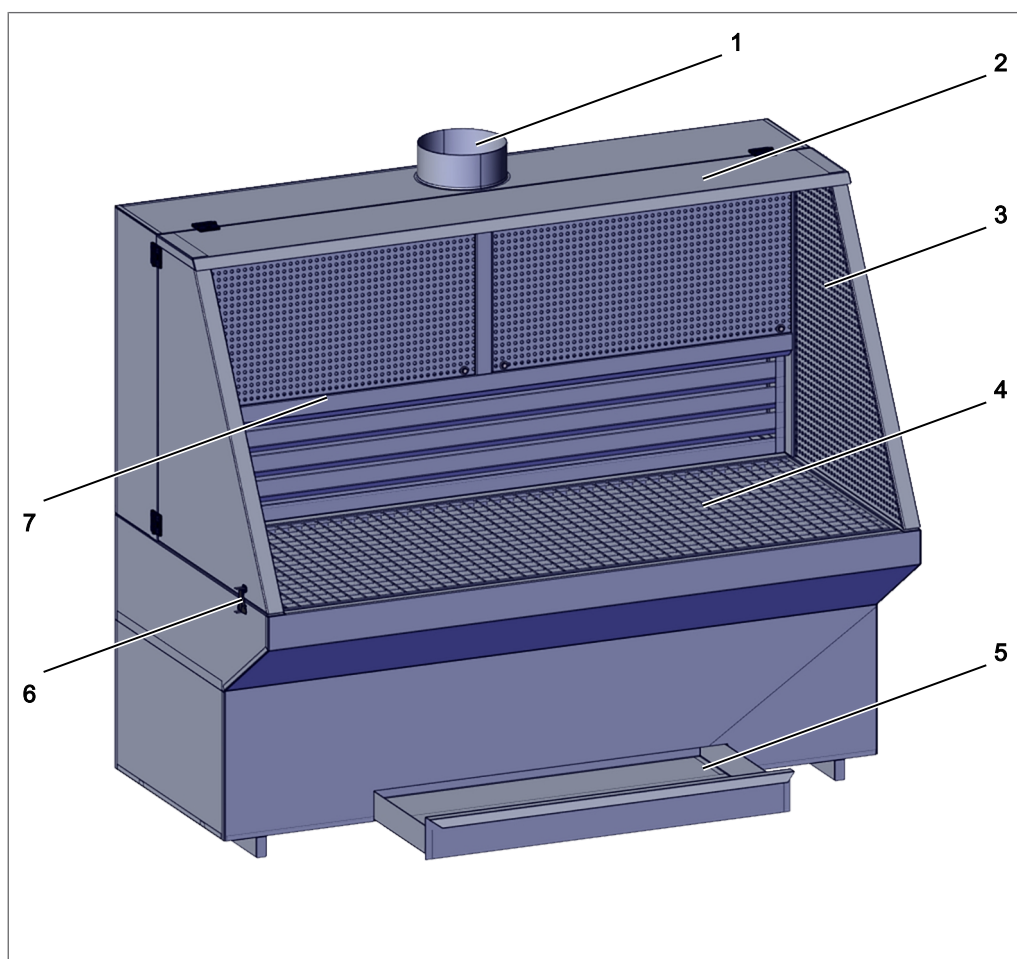


Figure 1 Structure and function

1	Connection piece	2	Top cover
3	Winged door	4	Grating
5	Dust bin	6	Tension locks
7	Slats		

During grinding processes, fumes and dust that are hazardous to health are produced, and these can be extracted and collected by the table and a connected filter system.

Fumes and dust are drawn downwards by the extraction section of the table and through the grating and through slats on the rear panel into the exhaust air duct and then into the filter system mounted on the table. During grinding, sparks, metal splatter and coarse dust particles drop downwards and are collected in an extractable dust bin.

The table has two winged doors and a top cover for the working area to be enlarged for bulky components.

The following filter systems can be connected to the product:

- HERR filter system, e.g. 880200-40

5 Technical data**5.1 Ambient conditions**

Temperature of the ambient air	-10 °C to +40 °C
Relative air humidity	80% non-condensing

Table 1 Ambient conditions for transport and storage

Temperature of the ambient air	+10 °C to +40 °C
Relative air humidity	70% non-condensing

Table 2 Ambient conditions for operation**5.2 Product data**

	EX-0-716-040	EX-0-716-041
Dimensions (L x W x H)	1010 x 1000 x 1700 mm	1510 x 1000 x 1700 mm
Working depth	750 mm	
Weight	220 kg	285 kg
Capacity of dust bin	26 l	40 l
Nominal diameter for DN intake piping	Ø 250 mm	
Air volume required	2000 m³/h	3000 m³/h
Max. load	350 kg with even load per area unit	

Table 3 Product data

6 Transport and setup

WARNING



Risk of injury due to improper transport and setup

Improper transport and setup can cause the product to topple or fall over. Serious injuries can be the result.

- ▶ Check and wear your personal protective equipment.
- ▶ Place the product on a suitable base (flat, solid, dry) on which it will not topple over.
- ▶ Take the weight of the product into account when lifting it. ⇒ 5 Technical data (Page 12)
- ▶ Use an appropriate lifting tool with load handling attachment for transport and setup of the product.
- ▶ Avoid jerky lifting and set-down of the product.
- ▶ Do not lift the product over persons or other units.
- ▶ At least two fitters should transport and set the product up.

NOTE



Property damage due to improper transport and setup

Improper transport or setup can cause the product to topple or fall over. This can result in material damage and irreparable damage to the product.

- ▶ Protect the product against influences of the weather, for example rain and direct sunlight.
- ▶ Ensure that the product does not make contact if you pass over edges.
- ▶ Use the product only in dry, clean and well-ventilated rooms.
- ▶ Maintain a minimum distance of 1 m from the wall when setting the product up in order to ensure that the product has sufficient ventilation.
- ▶ At least two fitters should transport and set the product up.
- ▶ Only transport the water pan when it has been emptied.

NOTE



Material damage due to forklifts/pallet trucks driving under the product improperly

If the forklift/pallet truck drives too far under the product, it can be damaged.

- ▶ Drive under the product carefully and only until the forklift/pallet truck cannot go any further.

NOTE



Material damage due to unsuitable means of transport

If an unsuitable vehicle is used to drive under the product, the product and dust bin can be damaged.


- ▶ Use a suitable forklift truck with a fork width of max. 50 mm.
- ▶ Take the low base height of the product into account.

The product can be transported and set up using a forklift.

- When transporting the product with a forklift, take the amount of space required by the forklift into account.

6.1 Transporting and Setting Up the Product

1. Drive a forklift with suitable fork length completely under the product.
2. Transport to a suitable setup location and set down.

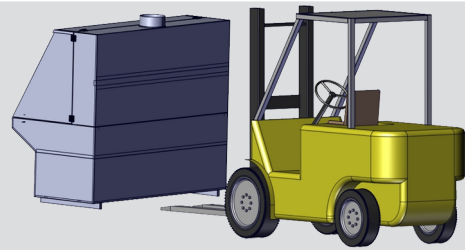


6.2 Modular extension of the working area


Adding further grinding tables can extend the working area. The winged doors must be dismantled at the connection points for this.

- Take the space required by the grinding tables into account.


1. Open the top cover of the first product.

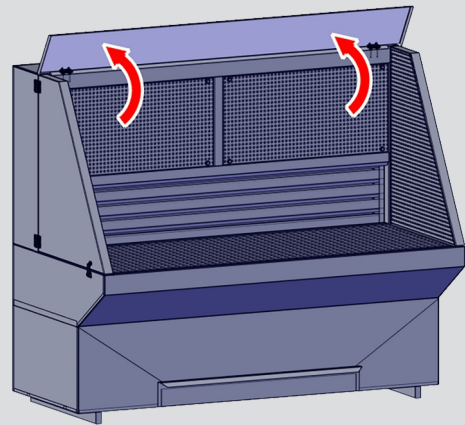


2. On the side to be extended, undo the screws of the tension lock and remove the tension lock.

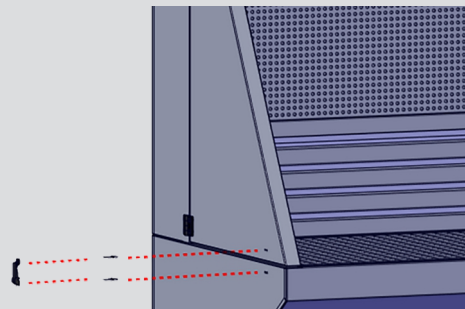


3. Undo the hinge screws on the side of the product and take winged door off.

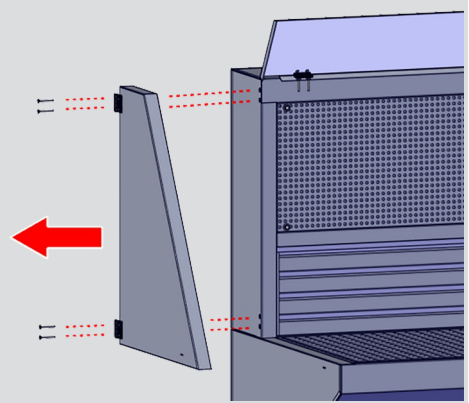

4. Disassemble the winged door on the other product as well, and place the products next to one another so that a continuous working area is produced.

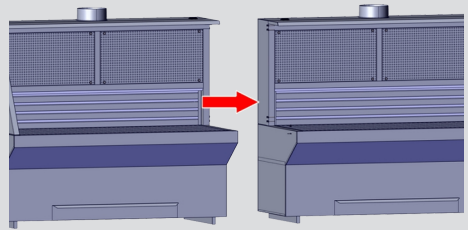

5. Add further products in the same way if necessary.

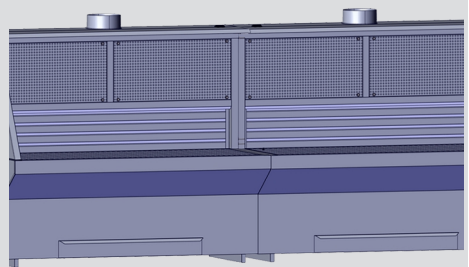

7 Putting into operation

⚠ WARNING



Fire hazard due to improper use


Improper use of the product can cause a fire. Serious burns can be the result.

- ▶ Do not use the product in areas subject to dust or explosion hazards.
- ▶ Do not use the product to extract dust that results from grinding oil-wetted parts.
- ▶ Do not use the product to extract flammable substances and liquids.

7.1 Mounting the piping to the air extraction fitting

The filter system or central extraction system must be attached to the connection air extraction fitting of the product using piping (not included in the scope of delivery). We recommend mounting a spark trap between the air extraction fitting and the piping in addition.

1. Use suitable fasteners to attach the filter system to the air extraction fitting on the product and seal using sealing tape.

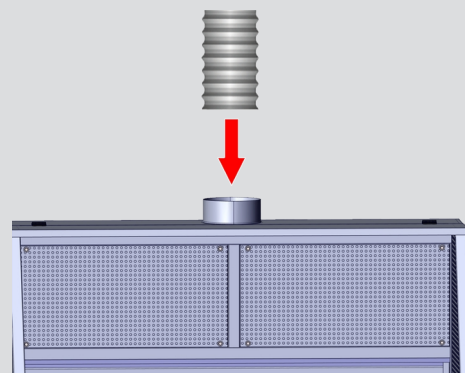

7.2 Carrying out functional test

1. Switch on the customer's filter system or central extraction system.
2. Make sure that the piping to the product is open and air flow can take place.
3. Check whether a draft can be felt at the slats and at the grid.
4. If necessary, carry out a grinding test using an angle grinder to check the extraction and sparking.

8 Operation

 WARNING**Health risk through inhalation of harmful grinding fumes and dust**

The grinding process produces fumes with harmful dust particles which can settle on the surface and get into the ambient air. They can damage the respiratory system when inhaled.

- ▶ Check and wear your personal protective equipment.
- ▶ Only use the product in rooms which are sufficiently ventilated.
- ▶ Make sure that all the seals on the product are free of dirt.
- ▶ Remove dust deposits in the surrounding area immediately using an industrial vacuum cleaner of dust class H or a damp cloth.

 WARNING**Fire hazard due to improper use**

Improper use of the product can cause a fire. Serious burns can be the result.


- ▶ Do not use the product in areas subject to dust or explosion hazards.
- ▶ Do not use the product to extract dust that results from grinding oil-wetted parts.
- ▶ Do not use the product to extract flammable substances and liquids.

- ▶ Switch on the connected filter system or central extraction system.
- ▶ Consult the documentation of all components used.


8.1 Opening the winged doors

The hinged lid and winged doors can be opened for the machining of long or bulky workpieces.


1. Open the top cover.

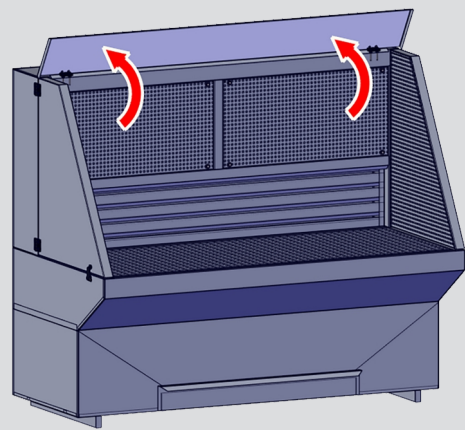


2. Undo the toggle-type fasteners on the winged door on both sides.

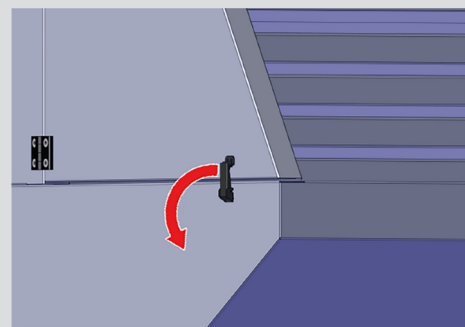

3. Open the winged doors.

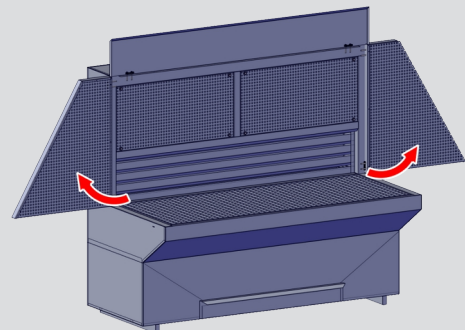

4. Close the top cover.

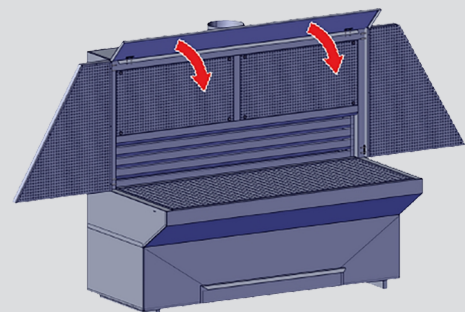

9 Putting out of operation

- ▶ Switch the connected filter system or central extraction system off.
- ▶ Consult the documentation of all components used.

10 Maintenance and cleaning

Regular maintenance and cleaning are prerequisites for a long service life and perfect function. The maintenance interval is determined by the working environment and operating time of the products. If the product is operated for longer than 8 hours per day, the maintenance interval should be adapted according to requirements.

WARNING



Health risk through inhalation of harmful grinding fumes and dust

The grinding process produces fumes with harmful dust particles which can settle on the surface and get into the ambient air. They can damage the respiratory system when inhaled.

- ▶ Check and wear your personal protective equipment.
- ▶ Only use the product in rooms which are sufficiently ventilated.
- ▶ Make sure that all the seals on the product are free of dirt.
- ▶ After cleaning and maintenance work check all screwed joints for a tight fit, leaks, chafing points. Tighten any loosened screwed joints. Correct any faults found immediately.
- ▶ Remove dust deposits in the surrounding area immediately using an industrial vacuum cleaner of dust class H or a damp cloth.

WARNING



Risk of crushing

Limbs can be crushed if product components are improperly installed or uninstalled.

- ▶ Do not reach into the danger zone.
- ▶ Check and wear your personal protective equipment.

- ▶ Consult the documentation of all components used.

10.1 Maintenance and cleaning intervals

The given intervals are for guidance and refer to one-shift operation. We recommend documenting the checks. At least the test date, the defects found and the name of the tester should be documented.

Interval	Job
If necessary	▶ Check the fill level in the dust bin and empty if necessary. ⇒ 10.3 Emptying and cleaning the dust bin (Page 22)
Weekly	▶ Check the product for outer signs of damage. ▶ If installed, check the connection hoses and connections for a tight fit and damage, and replace if necessary. ▶ If installed, check the equipotential bonding cable for a tight fit and damage and replace if necessary. ▶ Check all connection points of the piping and connectors for dust escape.
Yearly	▶ If installed, check the ground connections of the product and filter system for damage. ▶ If installed, open the piping inspection flap, and check the piping for dust deposits.

10.2 Cleaning the grid, slats and interior

WARNING



Risk of injury due to sharp edges


The grid has sharp edges. Cutting injuries can be the result.

- ▶ Wear protective gloves.
- ▶ Use at least 2 people for removal and insertion of the grid.

To extract swirling dust particles directly, the connected filter system or central extraction system should be switched on during cleaning of the grid and the slats.


1. Switch the connected filter system or central extraction system on.

2. Clean the slats and grid with a hand brush.

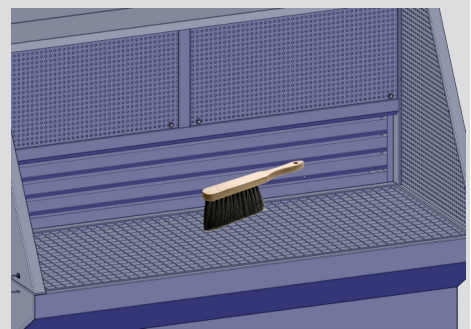


3. Switch the connected filter system or central extraction system off.


4. Have 2 people carefully lift and remove the grid.

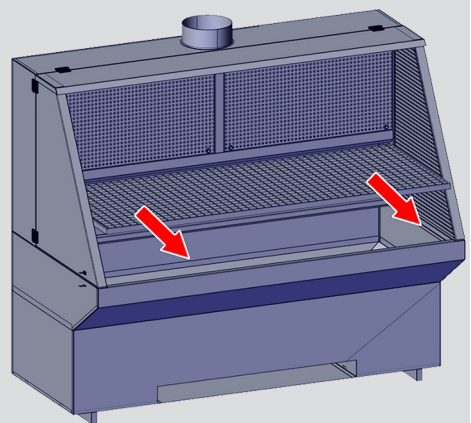

5. Vacuum out the interior of the product using an industrial-standard vacuum cleaner of dust class H.

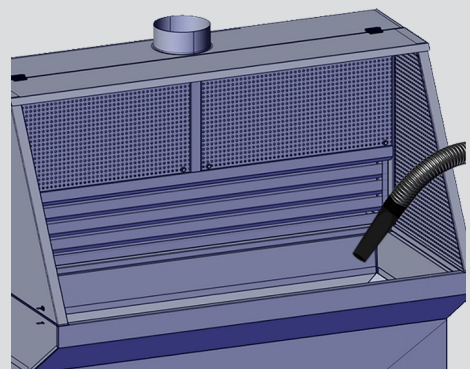


6. Have 2 people carefully insert the grid.

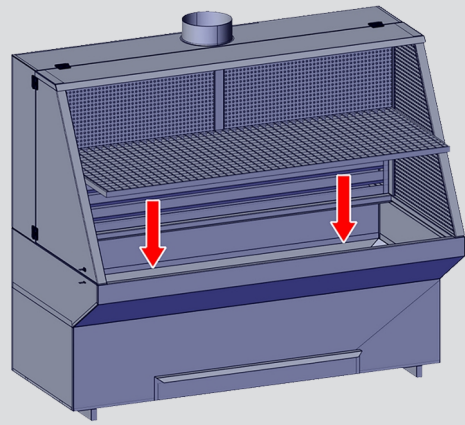

10.3 Emptying and cleaning the dust bin


1. Pull the dust bin out.

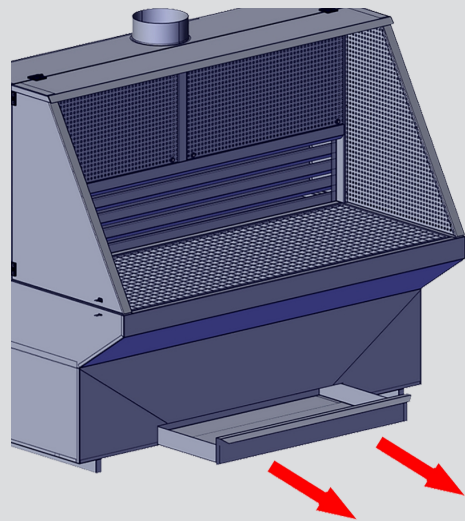

2. Empty the dust bin and vacuum out using an industrial-standard vacuum cleaner of dust class H if necessary.

3. Dispose of the dust in accordance with local laws and directives. ⇒ 13 Disposal (Page 26)

4. Insert the dust bin.

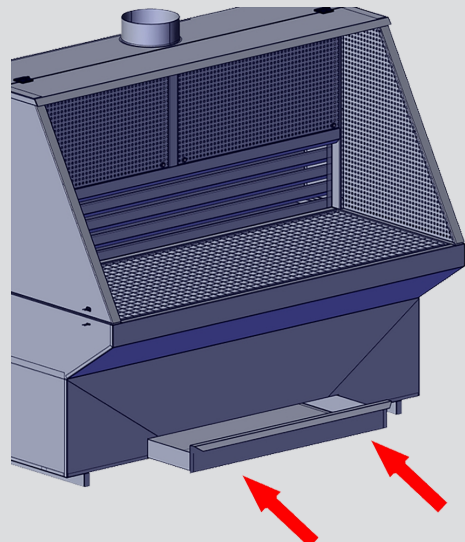

11 Faults and their correction



WARNING



Health risk through inhalation of harmful grinding fumes and dust

The grinding process produces fumes with harmful dust particles which can settle on the surface and get into the ambient air. They can damage the respiratory system when inhaled.

- ▶ Check and wear your personal protective equipment.
- ▶ Only use the product in rooms which are sufficiently ventilated.
- ▶ Make sure that all the seals on the product are free of dirt.
- ▶ Remove dust deposits in the surrounding area immediately using an industrial vacuum cleaner of dust class H or a damp cloth.

- ▶ Consult the documentation of all components used.
- ▶ Contact your retailer or THERMACUT in the event of questions or problems.

Fault	Cause	Troubleshooting
Insufficient extraction capacity	The filter system or central ex- traction system connected is not switched on.	▶ Switch on the filter system or central extraction system.
	The filter system or central ex- traction system connected is not set correctly.	▶ Set the extraction capacity in accordance with the legal requirements.
	The connected piping system is blocked.	▶ Eliminate blockage.

Table 4 Faults and troubleshooting


12 Disassembly

 WARNING**Risk of injury due to sharp edges**


The grid has sharp edges. Cutting injuries can be the result.

- ▶ Wear protective gloves.
- ▶ Use at least 2 people for removal and insertion of the grid.


1. Remove the piping of the filter system or central extraction system at the product air extraction fitting.

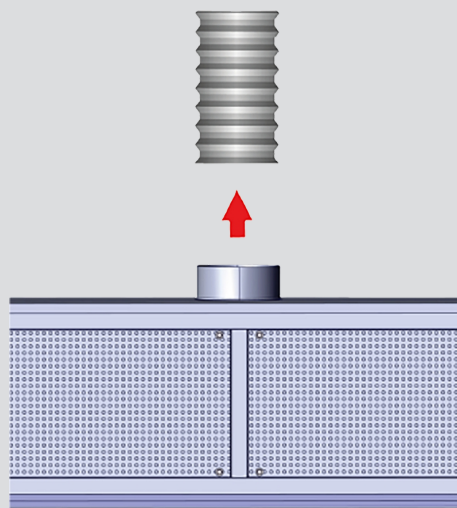

2. Pull the dust bin out.

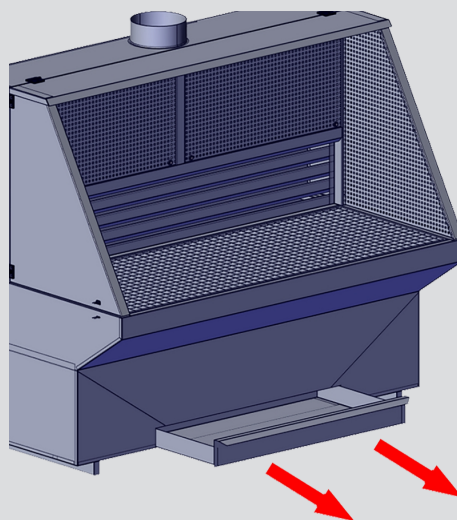

3. Have 2 people carefully lift and remove the grid.

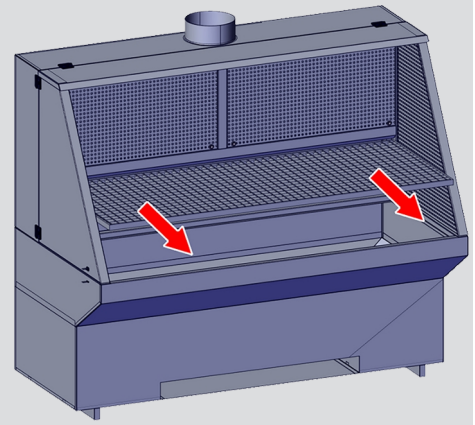

13 Disposal**13.1 Disposal of grinding dust**

The disposal of grinding dust is subject to special waste regulations. Grinding dust must not be allowed to get into the sewage system or be disposed of together with household waste.

- Heed local laws and directives on disposal.

13.2 Disposal of materials

This product is mainly made of metallic materials that can be melted in steel and iron works and are thus almost infinitely recyclable. The plastic materials used are labeled in preparation for their sorting and separation for later recycling.

- Heed local laws and directives on disposal.

13.3 Disposal of consumables

Oil, greases and cleaning agents must not contaminate the ground or enter the sewage system.

- Store, transport and dispose of consumables in suitable containers.
- Dispose of contaminated cleaning tools (brushes, rags, etc.) in accordance with the information provided by the consumables' manufacturer.
- Observe the local laws and regulations on disposal provisions in the safety data sheets of the consumables manufacturer.

13.4 Disposing of packaging

THERMACUT has reduced the transport packaging to a minimum. The ability to recycle packaging materials was always considered during their selection.

- Heed local laws and directives on disposal.

14 Addresses and contacts**EUROPE****CZECH REPUBLIC**

THERMACUT, k.s.
Headquarters and Production
Sokolovská 574, Mařatice
686 01, Uherské Hradiště
Tel.: +420 572 420 411
Fax: +420 572 420 420
IČ: 46963715 / DIČ: CZ46963715
Email: info@thermacut.cz
reditelstvi@thermacut.cz
www.thermacut.cz

THERMACUT, k.s.
Central Sales Department
Dukelská 76A
742 42 Šenov u Nového Jičína
Tel.: +420 556 423 418, 440
Email: sales@thermacut.cz
obchod@thermacut.cz
www.thermacut.cz

GERMANY

THERMACUT GmbH
Am Rübgarten 2
D-57299 Burbach
Tel.: +49 (0)2736 29 49 11-0
Fax: +49 (0)2736 29 49 11-77
Email: info@thermacut.de
www.thermacut.de

CROATIA

THERMACUT CROATIA d.o.o.
Petra Preradovića 21
532 70 Senj
Tel.: +385 53 882 622
Email: thermacut@gs.t-com.hr
www.thermacut.hr

POLAND

THERMACUT-POLAND SP. Z O.O.
ul. Stawowa 20
43-400 Cieszyń
Tel.: +48 33 852 13 34
Email: thermacut@thermacut.pl
www.thermacut.pl

FRANCE

THERMACUT FRANCE
6 Rue des Frères Lumière
67201 Eckbolsheim
Tel.: +33 3 88 76 58 75
Email: thermacut@thermacut.fr
www.thermacut.net

ROMANIA

THERMACUT ROMANIA SRL
B-dul 1 Decembrie 1918
no. 127A
540445 Târgu Mureș,
Jud. Mureș
Tel.: +40 265 263 205
Fax: +40 265 250 317
Email: office@thermacut.ro
www.thermacut.ro

UKRAINE

ООО "Термакат Украина ГмбХ"
ул. Петропавловская 24
С. ПЕТРОПАВЛОВСКАЯ БОРЩАГОВКА
КИЕВО-СВЯТОШИНСКИЙ Р-Н 08130
Тел./факс: +380 44 403 16 99
+380 50 336 33 91
Email: info@thermacut.ua
www.thermacut.ua

GREAT BRITAIN

Abicor Binzel UK Ltd.
Binzel House,
Mill Lane
Winwick Quay
Warrington,
WA2 8UA, Cheshire
Tel.: +44 1925 653944
Fax: +44 1925 654861
Email: info@abimail.co.uk
www.thermacut.net

SWEDEN

Alexander Binzel AB
Ringugnsgatan 4
SE-216 16 Limhamn
Tel.: 0046-40 6 991 750
Fax: 0046-40 6 991 770
Email: order@binzel.se
www.thermacut.net

DENMARK

Abicor Binzel A/S Denmark
Ringugnsgatan 4
SE-216 16 Limhamn
Tel.: 0045-43621633
Fax: 0045-43622324
Email: ac@binzel.se,
ket@binzel.se
www.thermacut.net

SLOVAKIA

THERMACUT SLOVAKIA, s.r.o.
Priemyselná ulica 1239
931 01 Šamorín
Tel.: +421 31 591 0121
+421 903 644 954
Email: obchod@thermacut.sk
www.thermacut.sk

NORWAY

Binzel Norge AS
Industrierveien 6
N-3300 Hokksund
Tel.: 0047-32 25 19 90
Email: post@binzel.no
www.thermacut.net

FINLAND

ABICOR BINZEL Finland Oy
Kartanontie 53
28430 Pori
Tel.: +358 2 634 4600
Fax.: +358 2 634 4650
Email: info@binzel.fi
www.thermacut.net

HUNGARY

COOPTIM HEGESZTÉSTECHNIKA Kft.
2030 ÉRD,
BUDAFOKI ÚT 10.
Tel: +36 (23) 521 430
Email: aruhas@cooptim.hu
www.thermacut.hu

ASIA**TURKEY**

ABICOR BINZEL Kaynak Teknik
Ticaret LTD. STI.
Girne Mah. Irmak Sok. Küçükalyi iş
Merkezi E Blok No: 72-6E PK: 34852
Maltepe İstanbul Türkiye
Tel.: +90 (216) 367 90 00
Fax: +90 (216) 367 90 14
Email: satisdestek@binzelabicor.com.tr
www.thermacuttr.com

INDIA

ABICOR BINZEL TECHNOWELD PVT LTD
SNo: 297, Indo German Technology park
Village: Urawade
Taluka: Mulshi
District: Pune-412 115
Tel.: 020-66743914, 020-39502691
Email: commercial@abicor-india.com
www.thermacut.net

KAZAKHSTAN

ABICOR BINZEL CENTRAL ASIA
АЛМАТЫ
УЛ. ЕГИЗБАЕВА 52, 050046.
Тел.: + 7 777 826 42 42
+ 7 717 262 57 30
Email: info@thermacut.com.kz
www.thermacut.kz

VIETNAM

MNT Industries Vietnam Co Ltd
No. 17, Street 34, Binh Tri Dong B Ward,
Binh Tan District; Hochiminh City
Tel.: 0084-903 858 001
Email: ezio.minh@mnt.com.vn
www.thermacut.net

SOUTH KOREA

Abicor Binzel Korea Ltd.
#A-101, 263, Gaejwa-ro
Guemjeong-gu
Busan
Tel.: 0082 (31) 732 6065 / 6066 / 6067
Fax: 0082 (31) 732 6064
Email: don.kim@binzel.kr
www.thermacut.net

JAPAN

Thermacut Japan Ltd.
3F Shin-Osaka Hankyu Building
1-1-1, Miyahara, Yodogawa-ku, Osaka
532-0003 Japan
Mobil: +81 (0)80 4738 9752
Tel.: +81 (0)6 7662 8857
Fax: +81 (0)6 7635 7498
Email: s.miura@thermacut.jp

UNITED ARAB EMIRATES

ABICOR BINZEL MIDDLE EAST FZE
PO Box: 86026, WFZ-04/27 RAKIA Free-
zone,
Jazeera al Hamra
Ras al Kaimah, United Arab Emirates

Tel.: +971 (7) 2432355
+971 50 377 1348
Fax: +971 (7) 2432356
Email: info@binzel-abicor.ae
www.thermacut.ae

15 Warranty

This product is an original THERMACUT product. THERMACUT GmbH guarantees correct manufacture and assumes a factory production and function warranty for this product upon delivery, which is in line with the most current technology and the regulations in force. If THERMACUT is responsible for a defect that is present, THERMACUT is obliged to remedy the defect or deliver a replacement at its own cost and its own discretion. The warranty covers manufacturing faults, but not damage resulting from natural wear and tear, overloading or improper use. The warranty period is defined in the General Terms and Conditions. Exceptions in the case of specific products are regulated separately. Warranty will also be rendered invalid if spare and wear parts are used that are not original THERMACUT parts and if the product has been repaired improperly by the user or a third party.

Wear parts are excluded in general from the warranty. In addition, THERMACUT is not liable for damage caused by using our products. Questions about warranty and service can be addressed to the manufacturer or our distributors.



© Copyright Thermacut k.s, Subject to change without a notice. All Rights Reserved.